

CONTENTS

INTRODUCTION.....	12
1 Scope.....	14
2 Normative references	14
3 Terms and definitions	14
4 General	17
4.1 General.....	17
4.2 Version number.....	17
5 Electrical specification	17
6 Interface power supply.....	17
7 Transmission protocol structure	17
7.1 General.....	17
7.2 24 bit forward frame encoding	18
7.2.1 Frame format for instructions and queries.....	18
7.2.2 Frame format for event messages	19
8 Timing	20
9 Method of operation.....	20
9.1 General.....	20
9.2 Application controller.....	20
9.2.1 General	20
9.2.2 Single-master application controller.....	21
9.2.3 Multi-master application controller	21
9.3 Input device	22
9.4 Instances of input devices	22
9.4.1 General	22
9.4.2 Instance number	22
9.4.3 Instance type	22
9.4.4 Feature type	22
9.4.5 Instance groups	23
9.5 Commands.....	23
9.5.1 General	23
9.5.2 Device commands.....	24
9.5.3 Instance commands	24
9.5.4 Feature commands	24
9.6 Event messages.....	24
9.6.1 Response to event messages.....	24
9.6.2 Device power cycle event.....	24
9.6.3 Input notification event.....	25
9.6.4 Event message filter	26
9.7 Input signal and input value.....	26
9.7.1 General	26
9.7.2 Input resolution	26
9.7.3 Getting the input value	27
9.7.4 Notification of changes.....	28
9.8 System failure.....	28
9.9 Operating a control device.....	28
9.9.1 Enable/disable the application controller.....	28

9.9.2	Enable/disable event messages	28
9.9.3	Quiescent mode.....	29
9.9.4	Modes of operation	29
9.10	Memory banks	30
9.10.1	General	30
9.10.2	Memory map.....	30
9.10.3	Selecting a memory bank location	31
9.10.4	Memory bank reading	31
9.10.5	Memory bank writing.....	32
9.10.6	Memory bank 0	33
9.10.7	Memory bank 1	36
9.10.8	Manufacturer specific memory banks.....	37
9.10.9	Reserved memory banks.....	37
9.11	Reset.....	37
9.11.1	Reset operation	37
9.11.2	Reset memory bank operation.....	37
9.12	Power on behaviour	38
9.12.1	Power on	38
9.12.2	Power cycle notification	38
9.13	Priority use	38
9.13.1	General	38
9.13.2	Priority of input notifications	39
9.14	Assigning short addresses	39
9.14.1	General	39
9.14.2	Random address allocation.....	39
9.14.3	Identification of a device	40
9.15	Exception handling.....	40
9.16	Device capabilities and status information	40
9.16.1	Device capabilities.....	40
9.16.2	Device status.....	41
9.16.3	Instance status	41
9.17	Non-volatile memory	42
10	Declaration of variables	42
11	Definition of commands	44
11.1	General	44
11.2	Overview sheets	44
11.3	Event messages	49
11.3.1	INPUT NOTIFICATION (<i>device/instance, event</i>).....	49
11.3.2	POWER NOTIFICATION (<i>device</i>).....	49
11.4	Device control instructions	49
11.4.1	General	49
11.4.2	IDENTIFY DEVICE	49
11.4.3	RESET POWER CYCLE SEEN	50
11.5	Device configuration instructions	50
11.5.1	General	50
11.5.2	RESET	50
11.5.3	RESET MEMORY BANK (<i>DTR0</i>).....	50
11.5.4	SET SHORT ADDRESS (<i>DTR0</i>).....	50

11.5.5	ENABLE WRITE MEMORY	50
11.5.6	ENABLE APPLICATION CONTROLLER	51
11.5.7	DISABLE APPLICATION CONTROLLER	51
11.5.8	SET OPERATING MODE (<i>DTR0</i>)	51
11.5.9	ADD TO DEVICE GROUPS 0-15 (<i>DTR2:DTR1</i>).....	51
11.5.10	ADD TO DEVICE GROUPS 16-31 (<i>DTR2:DTR1</i>).....	51
11.5.11	REMOVE FROM DEVICE GROUPS 0-15 (<i>DTR2:DTR1</i>)	51
11.5.12	REMOVE FROM DEVICE GROUPS 16-31 (<i>DTR2:DTR1</i>)	51
11.5.13	START QUIESCENT MODE	51
11.5.14	STOP QUIESCENT MODE	52
11.5.15	ENABLE POWER CYCLE NOTIFICATION	52
11.5.16	DISABLE POWER CYCLE NOTIFICATION	52
11.5.17	SAVE PERSISTENT VARIABLES	52
11.6	Device queries	52
11.6.1	General	52
11.6.2	QUERY DEVICE CAPABILITIES.....	52
11.6.3	QUERY DEVICE STATUS	53
11.6.4	QUERY APPLICATION CONTROLLER ERROR.....	53
11.6.5	QUERY INPUT DEVICE ERROR	53
11.6.6	QUERY MISSING SHORT ADDRESS.....	53
11.6.7	QUERY VERSION NUMBER	53
11.6.8	QUERY CONTENT <i>DTR0</i>	53
11.6.9	QUERY NUMBER OF INSTANCES.....	53
11.6.10	QUERY CONTENT <i>DTR1</i>	54
11.6.11	QUERY CONTENT <i>DTR2</i>	54
11.6.12	QUERY RANDOM ADDRESS (H)	54
11.6.13	QUERY RANDOM ADDRESS (M).....	54
11.6.14	QUERY RANDOM ADDRESS (L).....	54
11.6.15	READ MEMORY LOCATION (<i>DTR1, DTR0</i>)	54
11.6.16	QUERY APPLICATION CONTROL ENABLED.....	54
11.6.17	QUERY OPERATING MODE	54
11.6.18	QUERY MANUFACTURER SPECIFIC MODE	54
11.6.19	QUERY QUIESCENT MODE	55
11.6.20	QUERY DEVICE GROUPS 0-7.....	55
11.6.21	QUERY DEVICE GROUPS 8-15	55
11.6.22	QUERY DEVICE GROUPS 16-23	55
11.6.23	QUERY DEVICE GROUPS 24-31	55
11.6.24	QUERY POWER CYCLE NOTIFICATION	55
11.6.25	QUERY EXTENDED VERSION NUMBER(<i>DTR0</i>).....	55
11.6.26	QUERY RESET STATE	55
11.7	Instance control instructions	55
11.8	Instance configuration instructions.....	56
11.8.1	General	56
11.8.2	ENABLE INSTANCE	56
11.8.3	DISABLE INSTANCE	56
11.8.4	SET PRIMARY INSTANCE GROUP (<i>DTR0</i>)	56
11.8.5	SET INSTANCE GROUP 1 (<i>DTR0</i>).....	56
11.8.6	SET INSTANCE GROUP 2 (<i>DTR0</i>).....	56

11.8.7	SET EVENT SCHEME (<i>DTR0</i>)	57
11.8.8	SET EVENT PRIORITY (<i>DTR0</i>)	57
11.8.9	SET EVENT FILTER (<i>DTR2, DTR1, DTR0</i>)	57
11.9	Instance queries	57
11.9.1	General	57
11.9.2	QUERY INSTANCE TYPE	57
11.9.3	QUERY RESOLUTION	57
11.9.4	QUERY INSTANCE ERROR	58
11.9.5	QUERY INSTANCE STATUS	58
11.9.6	QUERY INSTANCE ENABLED	58
11.9.7	QUERY PRIMARY INSTANCE GROUP	58
11.9.8	QUERY INSTANCE GROUP 1	58
11.9.9	QUERY INSTANCE GROUP 2	58
11.9.10	QUERY EVENT SCHEME	58
11.9.11	QUERY INPUT VALUE	58
11.9.12	QUERY INPUT VALUE LATCH	59
11.9.13	QUERY EVENT PRIORITY	59
11.9.14	QUERY FEATURE TYPE	59
11.9.15	QUERY NEXT FEATURE TYPE	59
11.9.16	QUERY EVENT FILTER 0-7	59
11.9.17	QUERY EVENT FILTER 8-15	60
11.9.18	QUERY EVENT FILTER 16-23	60
11.10	Special commands	60
11.10.1	General	60
11.10.2	TERMINATE	60
11.10.3	INITIALISE (<i>device</i>)	60
11.10.4	RANDOMISE	60
11.10.5	COMPARE	61
11.10.6	WITHDRAW	61
11.10.7	SEARCHADDRH (<i>data</i>)	61
11.10.8	SEARCHADDRM (<i>data</i>)	61
11.10.9	SEARCHADDRL (<i>data</i>)	61
11.10.10	PROGRAM SHORT ADDRESS (<i>data</i>)	62
11.10.11	VERIFY SHORT ADDRESS (<i>data</i>)	62
11.10.12	QUERY SHORT ADDRESS	62
11.10.13	WRITE MEMORY LOCATION (<i>DTR1, DTR0, data</i>)	62
11.10.14	WRITE MEMORY LOCATION – NO REPLY (<i>DTR1, DTR0, data</i>)	63
11.10.15	DTR0 (<i>data</i>)	63
11.10.16	DTR1 (<i>data</i>)	63
11.10.17	DTR2 (<i>data</i>)	63
11.10.18	DIRECT WRITE MEMORY (<i>DTR1, offset, data</i>)	63
11.10.19	DTR1:DTR0 (<i>data1, data0</i>)	64
11.10.20	DTR2:DTR1 (<i>data2, data1</i>)	64
11.10.21	SEND TESTFRAME (<i>data</i>)	64
12	Test procedures	65
12.1	General notes on test	65
12.1.1	General	65
12.1.2	Test execution	65

12.1.3	Data transmission	65
12.1.4	Test setup.....	66
12.1.5	Test output	66
12.1.6	Test notation.....	66
12.1.7	Test execution limitations	68
12.1.8	Test results.....	68
12.1.9	Exception handling.....	68
12.1.10	Unexpected answer.....	68
12.2	Preamble	70
12.2.1	Test preamble.....	70
12.3	Physical operational parameters.....	81
12.3.1	Polarity test	81
12.3.2	Maximum and minimum system voltage	82
12.3.3	Overvoltage protection test.....	83
12.3.4	Current rating test.....	83
12.3.5	Transmitter voltages	85
12.3.6	Transmitter rising and falling edges	86
12.3.7	Transmitter bit timing	88
12.3.8	Transmitter frame timing	90
12.3.9	Receiver start-up behavior	91
12.3.10	Receiver threshold	93
12.3.11	Receiver bit timing	93
12.3.12	Extended receiver bit timing	97
12.3.13	Receiver forward frame violation	99
12.3.14	Receiver settling timing	99
12.3.15	Receiver frame timing FF-FF send twice.....	100
12.3.16	Transmitter collision avoidance by priority	102
12.3.17	Transmitter collision detection for truncated idle phase	103
12.3.18	Transmitter collision detection for extended active phase.....	106
12.4	Device configuration instructions	109
12.4.1	RESET deviceGroups	109
12.4.2	RESET quiescentMode	110
12.4.3	RESET instance groups	111
12.4.4	RESET event filter	112
12.4.5	RESET event scheme	113
12.4.6	RESET: timeout / command in-between.....	114
12.4.7	Send twice timeout (device)	116
12.4.8	Send twice timeout (instance).....	119
12.4.9	Commands in-between (device).....	121
12.4.10	Commands in-between (instance).....	124
12.4.11	SAVE PERSISTENT VARIABLES	127
12.4.12	SET OPERATING MODE	127
12.4.13	Device Disable/Enable Application Controller.....	128
12.4.14	Multi Master Control Device PING	129
12.4.15	Quiescent Mode.....	130
12.4.16	Device power cycle notification.....	131
12.4.17	SET SHORT ADDRESS	132
12.4.18	Reset/Power-on values (device).....	133

12.4.19	Reset/Power-on values (instance)	135
12.4.20	DTR0 / DTR1 / DTR2	136
12.4.21	DTR1:DTR0 and DTR2:DTR1	137
12.4.22	Device Groups	138
12.5	Device queries	139
12.5.1	Device query capabilities	139
12.5.2	QUERY VERSION NUMBER	140
12.5.3	Device power cycle seen	140
12.5.4	Input device error	141
12.6	Device Memory banks	142
12.6.1	READ MEMORY LOCATION on Memory Bank 0	142
12.6.2	READ MEMORY LOCATION on Memory Bank 1	146
12.6.3	READ MEMORY LOCATION on other Memory Banks	148
12.6.4	Memory bank writing	150
12.6.5	ENABLE WRITE MEMORY: writeEnableState	156
12.6.6	ENABLE WRITE MEMORY: timeout / command in-between	158
12.6.7	RESET MEMORY BANK: timeout / command in-between	159
12.6.8	RESET MEMORY BANK	162
12.7	Device Special commands	163
12.7.1	INITIALISE – timer	163
12.7.2	TERMINATE	164
12.7.3	INITIALISE - device addressing	165
12.7.4	RANDOMISE	166
12.7.5	COMPARE	167
12.7.6	WITHDRAW	168
12.7.7	SEARCHADDRH / SEARCHADDRM / SEARCHADDRL	169
12.7.8	PROGRAM SHORT ADDRESS	170
12.7.9	VERIFY SHORT ADDRESS	172
12.7.10	QUERY SHORT ADDRESS	173
12.7.11	IDENTIFY DEVICE	175
12.8	Logical unit cross contamination	177
12.8.1	DTR0	177
12.8.2	NVM variables	178
12.8.3	Random address generation	178
12.8.4	Addressing 1	179
12.8.5	Addressing 2	180
12.8.6	Addressing 3	182
12.9	Instance addressing	183
12.9.1	Instance Type Addressing	183
12.9.2	Instance Primary Group	184
12.9.3	Instance Group 2	186
12.9.4	Instance Group 1	187
12.9.5	Instance Group Combinations	189
12.9.6	Multiple Instances Answer	190
12.10	Instance configuration instructions	191
12.10.1	Instance Enable/Disable	191
12.10.2	Event Scheme	194
12.10.3	Input Resolution & Input Value	198

12.10.4	Event Filter	199
12.11	Instance queries.....	200
12.11.1	Instance Number and Types	200
12.11.2	Instance Status	200
12.11.3	Instance Error	201
12.12	Instance cross contamination	202
12.12.1	Instance Event Priority	202
12.13	Reserved Commands	203
12.13.1	Reserved standard device commands.....	203
12.13.2	Reserved instance commands (instance type 0).....	203
12.13.3	Reserved special commands	204
12.14	General subsequences	205
12.14.1	Reset Device	205
12.14.2	EnableApplicationControllerAndAllInstances	206
12.14.3	DisableApplicationControllerAndAllInstances	206
12.14.4	HasApplicationController	206
12.14.5	GetVersionNumber.....	207
12.14.6	AddDeviceGroups	207
12.14.7	RemoveDeviceGroups.....	207
12.14.8	ClearAllDeviceGroups	208
12.14.9	CheckDeviceGroups	208
12.14.10	GetDeviceGroups.....	209
12.14.11	PowerCycle	209
12.14.12	PowerCycleAndWaitForBusPower	210
12.14.13	PowerCycleAndWaitForDecoder	210
12.14.14	SetupTestFrame	211
12.14.15	GetNumberOfInstances	211
12.14.16	GetEventFilter	211
12.14.17	SetEventFilter	211
12.14.18	GetNumberOfLogicalUnits	212
12.14.19	GetIndexOfLogicalUnit	212
12.14.20	GetRandomAddress	212
12.14.21	GetLimitedRandomAddress	212
12.14.22	SetSearchAddress	213
12.14.23	SetShortAddress	213
12.14.24	ReadMemBankMultibyteLocation.....	214
12.14.25	FindImplementedMemoryBank.....	214
12.14.26	FindAllImplementedMemoryBanks	215
12.14.27	ShortAddress	215
12.14.28	GroupAddress	215
12.14.29	Broadcast	216
12.14.30	BroadcastUnaddressed	216
12.14.31	InstanceNumber.....	216
12.14.32	InstanceGroup	216
12.14.33	InstanceType	216
12.14.34	InstanceBroadcast	217
12.14.35	FeatureOfInstanceNumber	217
12.14.36	FeatureOfInstanceGroup	217

12.14.37 FeatureOfInstanceType.....	217
12.14.38 FeatureOfInstanceBroadcast.....	218
12.14.39 FeatureOfDevice.....	218
12.14.40 FeatureOfDeviceWithGroupAddress.....	218
12.14.41 FeatureOfDeviceWithBroadcast.....	219
Bibliography.....	219
Annex ZA (normative) Normative references to international publications with their corresponding European publications.....	221
Figure 1 – IEC 62386 graphical overview.....	12
Figure 2 – Current rating test.....	84
Table 1 – 24-bit command frame encoding.....	18
Table 2 – Instance byte in a command frame.....	18
Table 3 – 24-bit event message frame encoding.....	19
Table 4 – Instance types.....	22
Table 5 – Feature types.....	23
Table 6 – Instance group variables.....	23
Table 7 – Device address information in power cycle event.....	25
Table 8 – Event addressing schemes.....	25
Table 9 – Signal level (~50%) versus resolution and input value.....	27
Table 10 – Example querying sequence to read a 4-byte input value.....	27
Table 11 – Basic memory map of memory banks.....	31
Table 12 – Memory map of memory bank 0.....	34
Table 13 – Memory map of memory bank 1.....	36
Table 14 – Control device capabilities.....	41
Table 15 – Control device status.....	41
Table 16 – Instance status.....	41
Table 17 – Declaration of device variables.....	43
Table 18 – Declaration of instance variables.....	44
Table 19 – Instance event messages.....	44
Table 20 – Device event messages.....	44
Table 21 – Standard commands.....	45
Table 22 – Special commands (implemented by both application controller and input device).....	48
Table 23 – Device addressing with “INITIALISE (<i>device</i>)”.....	60
Table 24 – Unexpected outcome.....	69
Table 25 – Parameters for test sequence Check Factory Default 103.....	76
Table 26 – Parameters for test sequence CheckFactoryDefault103PerLogicalUnit.....	79
Table 27 – Parameters for test sequence Transmitter bit timing.....	81
Table 28 – Parameters for test sequence Maximum and minimum system voltage.....	82
Table 29 – Parameters for test sequence Transmitter voltages.....	86
Table 30 – Parameters for test sequence Transmitter rising and falling edges.....	87
Table 31 – Parameters for test sequence Transmitter bit timing.....	90
Table 32 – Parameters for test sequence Receiver frame timing.....	91
Table 33 – Parameters for test sequence Receiver start-up behavior.....	93
Table 34 – Parameters for test sequence Receiver bit timing.....	94
Table 35 – Parameters for test sequence extended receiver bit timing.....	98

Table 36 – Parameters for test sequence Receiver frame violation and recovering after frame size violation	99
Table 37 – Parameters for test sequence Receiver frame timing	100
Table 38 – Parameters for test sequence transmitter collision avoidance by priority	103
Table 39 – Parameters for test sequence transmitter collision detection for truncated idle phase	106
Table 40 – Parameters for test sequence transmitter collision detection for extended active phase	109
Table 41 – Parameters for test sequence RESET instance groups	112
Table 42 – Parameters for test sequence Send twice timeout (device)	118
Table 43 – Parameters for test sequence Send twice timeout (instance)	120
Table 44 – Parameters for test sequence Commands in-between (device)	123
Table 45 – Parameters for test sequence Commands in-between.....	126
Table 46 – Parameters for test sequence SET SHORT ADDRESS	133
Table 47 – Parameters for test sequence Reset/Power-on values (device)	135
Table 48 – Parameters for test sequence Reset/Power-on values (instance)	136
Table 49 – Parameters for test sequence DTR0 / DTR1 / DTR2	137
Table 50 – Parameters for test sequence DTR1:DTR0 and DTR2:DTR1	138
Table 51 – Parameters for test sequence READ MEMORY LOCATION on Memory Bank 0.	146
Table 52 – Parameters for test sequence READ MEMORY LOCATION on Memory Bank 1.	148
Table 53 – Parameters for test sequence Memory bank writing	153
Table 54 – Parameters for test sequence ENABLE WRITE MEMORY: writeEnableState.....	157
Table 55 – Parameters for test sequence ENABLE WRITE MEMORY: timeout / command in-between	159
Table 56 – Parameters for test sequence RESET MEMORY BANK: timeout / command in-between	162
Table 57 – Parameters for test sequence RESET MEMORY BANK	163
Table 58 – Parameters for test sequence INITIALISE - device addressing.....	165
Table 59 – Parameters for test sequence COMPARE.....	168
Table 60 – Parameters for test sequence WITHDRAW.....	169
Table 61 – Parameters for test sequence PROGRAM SHORT ADDRESS	172
Table 62 – Parameters for test sequence VERIFY SHORT ADDRESS	173
Table 63 – Parameters for test sequence QUERY SHORT ADDRESS.....	174
Table 64 – Parameters for test sequence IDENTIFY DEVICE.....	177
Table 65 – Parameters for test sequence Addressing 2	182
Table 66 – Parameters for test sequence Reserved commands: standard device commands	203
Table 67 – Parameters for test sequence Reserved instance commands (instance type 0) .	204
Table 68 – Parameters for test sequence Reserved special commands	205